

### Installation instruction Atratus

#### General instructions

Read this instruction with care. After installation save this instruction for future reference and maintenance.

#### Safety

- Before installation, maintenance or changing of the lamp, the electricity to the source of light has to be switched off.
- For installation of the luminaire a qualified electric engineer is recommended. The luminaire must be installed in compliance with the most recent stipulations and installation instructions.
- Check the total capacity of the actual current circuit, this may not exceed the maximum allowed capacity of the section.
- All replacement parts must be equal to the original parts.
- Do not cover luminaires with isolation or similar materials.

#### Product specification

- This first class luminaire has to be earthed.
- IP20 classified, unless mentioned otherwise.
- To be used on surfaces with normal risk of fire.
- It is recommended that the surrounding temperature is less than 25°C.
- 230/240V AC 50Hz.
- CE marked.
- This product is designed and produced in compliance with stipulations of: EN55015; EN 60592-2; EN 60598-2-2.

 
#### Installation

- In the ceiling a hole, diameter 115mm, has to be made to fit the luminaire (1).
- Connect the cable to the electric connection block, to be found in the box connected to the luminaire .
- The ballast box used must be fit for the lamp used. The luminaire must be earthed (2).
- Turn the ring with the glass out of the key and take the glass and reflector out of the luminaire(3).
- Fit the appropriate lamp and reflector in to the luminaire, look at the label on the luminaire for the right lamp.(4).
- Push the luminaire into the hole and fix the body with the installation grips, these have to be moved into the ceiling. The luminaire is fixed now (2+3).
- Fit the lamp. The lamp used, has to be of a type and power corresponding the label given inside the luminaire (4). We recommend you to use an A- type brand lamp.
- Connect the luminaire to the actual electric current circuit. Switch on the current and check correct operation.

#### Lamp type

Inside is a label which lamp type you should use, if applicable.

#### Do NOT diverge!

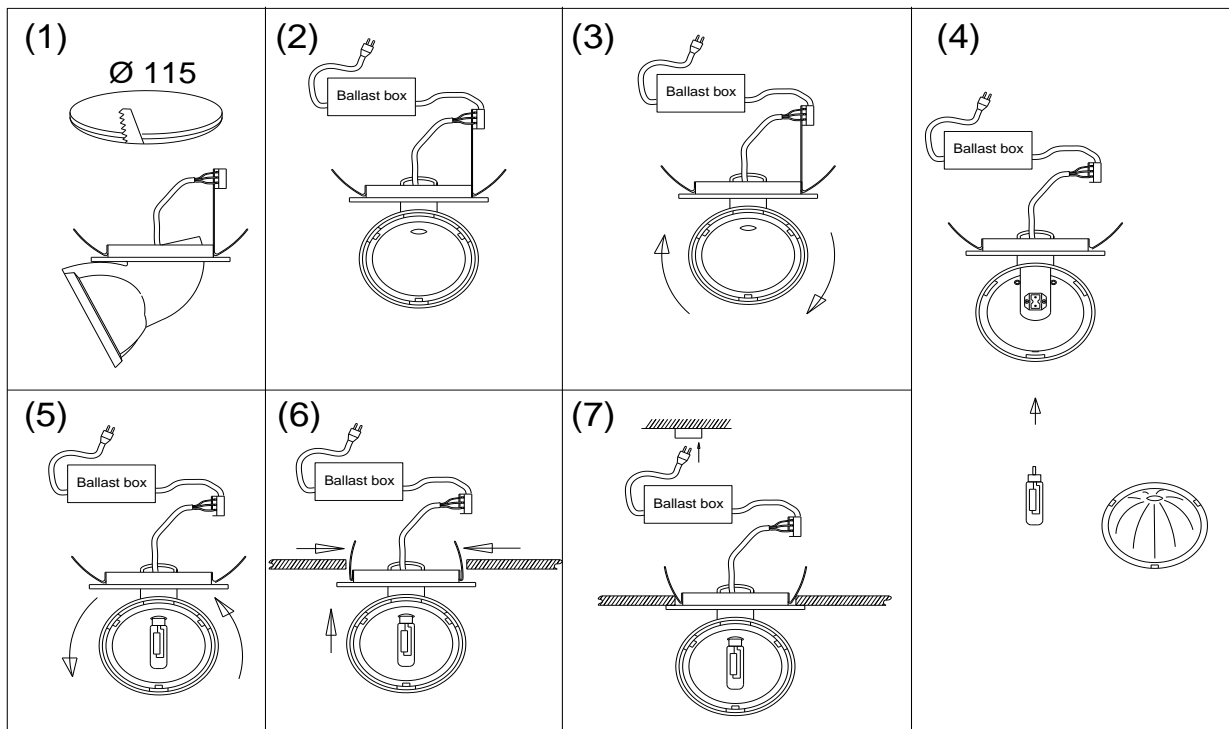

To guarantee the dependability and correct operation, the installation instructions must be followed up correctly. Changes are not allowed. When changes are made on the luminaires, the warranty will expire. Emilux B.V. does not take any responsibility when luminaires are modified in any way!

